

## **PS Cable assembly**

- 1. If recycling a cable from a broken controller, or if using an extension cable, cut the cable 10-40cm from the plug.
- 2. Strip 3-5 cm of the outer insulation sleeving from the cable
- 3. Cut down the red wire and terminate it with insulated tape
- 4. Strip 5mm from the remaining wires.
- 5. Crimp each stripped wire with a female Dupont crimp in line with the crimping guide

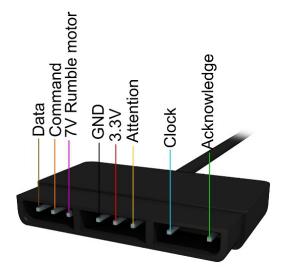


## **Crimping**

- 1. Place the wire in a female Dupont crimp
- 2. Fold the pull relief around the wire

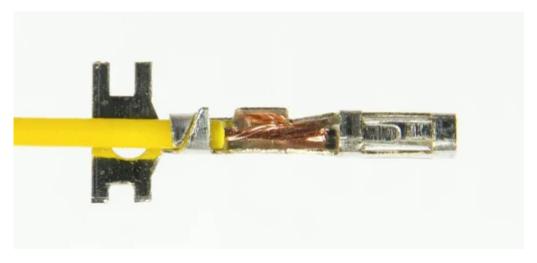

- 3. Use a crimping tool to shrink the connector around the wire ends
- 4. Slide the connector housing onto the crimp until it mounts, making sure the orientation is correct

## PS1/PS2 Single Port (1 Player or Multitap) connection diagram

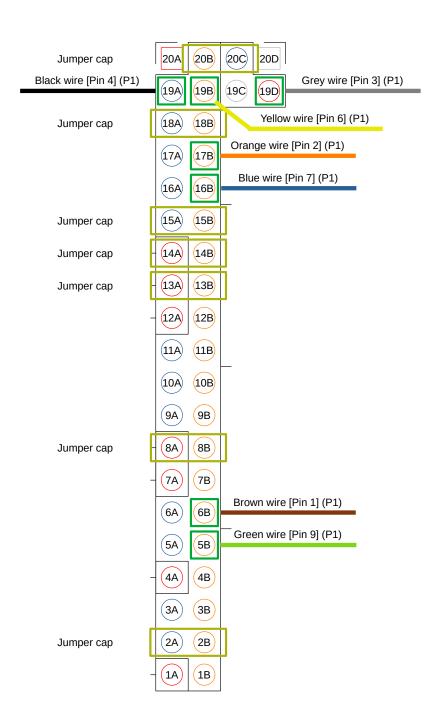

## PS1/PS2 Single Port (1 Player or Multitap) connection guide

- 1. Place the jumper caps on rows 2, 8, 13, 14, 15 and 18
- 2. On row 20, place the jumper cap across the two central pins (20B & 20C) of the row
- 3. Connect the green wire (Port pin 9) to pin 5B
- 4. Connect the brown wire (Port pin 1) to pin 6B
- 5. Connect the blue wire (Port pin 7) to pin 16B
- 6. Connect the orange wire (Port pin 2) to pin 17B
- 7. Connect the yellow wire (Port pin 6) to pin 19B
- 8. Connect the black wire (Port pin 4) to pin 19A
- 9. Connect the grey wire (Port pin 3) to pin 19D
- 1. Connections should now resemble the diagram